


100m 4x4 HDMI 2.0 HDBaseT Matrix with 4 hdmi loop out

Support 4K@60hz YUV4:4:4, 18Gbps, HDR

OPERATION MANUAL

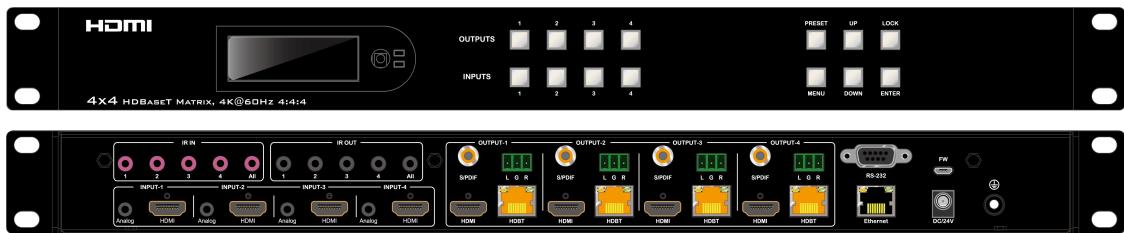

Thank you for purchasing this product. For optimum performance and safety, please read these instructions carefully before connecting, operating or adjusting this product. Please keep this manual for future reference.

SURGE PROTECTION DEVICE RECOMMENDED

This product contains sensitive electrical components that may be damaged by electrical spikes, surges, electric shock, lightning strikes, etc. Use of surge protection systems is highly recommended in order to protect and extend the life of your equipment.

Catalogue

1. Features.....	4
2. Package Contents.....	4
3. Specifications.....	4
4. Panel Descriptions.....	5
5. Wiring Diagram.....	6
6. Input / output channel key operation.....	7
7. Video switching operation.....	8
7.1. Video switch.....	8
7.2. Video Control.....	8
The specific operation as follows:.....	8
7.3. Audio Control.....	10
7.4. EDID Set Mode Interface.....	11
7.5. Preset Interface.....	12
7.6. SETUP mode Interface.....	13
7.6.1. RS-232 Baud Rate setting.....	14
7.6.2. DHCP On/Off setting.....	14
7.6.3. POC power switch.....	14
7.6.4. Reboot setting.....	15
7.6.5. Factory setting.....	15
7.7. INFO mode Interface.....	16
8. Audio Extraction.....	17
9. Remote Control Description.....	18
10. IR system.....	18
11. Command Control.....	19
12. Web Control.....	20
12.1. Enter Web and Control.....	21
12.2. “Status” interface:.....	21
12.3. “Input” interface:.....	22
12.4. “Output” interface:.....	22
12.5. “Preset” interface:.....	23
12.6. “User EDID” interface:.....	23
12.7. “Network” interface:.....	23
12.8. “System” interface:.....	23
13. FW UPGRADE.....	24
13.1. MCU Upgrade:.....	24
13.2. CPLD Upgrade:.....	24
13.3. HTML (WEB GUI) Upgrade:.....	25
MAINTENANCE.....	26
PRODUCT SERVICE.....	26
WARRANTY.....	26

1. Features

- Incorporate HDBaseT technology
- 4 x HDMI input and 4 x HDBaseT output with 4 x HDMI Loop out
- HDMI 2.0 version support 4K@60Hz YUV4:4:4, 8bit, 18G, HDR10
- Transmit up to 100m under 1080p, 70m under 4K@60Hz
- HDCP 2.2/1.4 compliant
- With wide-band Bi-Direction IR routed control(38~56KHz)
- Support 4x Analog Audio input
- Support 4x Analog Audio and 4x SPDIF Audio extraction output
- Support Panel Button with LCD, IR Routing, RS232, TCP/IP, PC Tool Control
- Support POC (Receiver powered by HDBaseT Matrix)
- Support Micro USB for FW updating


2. Package Contents

- 1). 1x Main Unit (HDBaseT Matrix)
- 2). 1x DC24V4A Power adapter
- 3). 1x Remote control
- 4). 5xIR Transmitter cables, 5x Wide-Band IR Receiver cables
- 5). 1x CD for control software & user manual & Command list
- 6). 4x 3Pin plug for Analog audio output
- 7). 1U rack design metal case with 2 mounting ear


3. Specifications

Operating Temperature Range	-5 to +40°C(23 to +104 °F)
Storage Temperature Range	-10 to +60°C(-14 to +140 °F)
Operating Humidity Range	5 to 90 % RH (no condensation)
Input Video Signal	0.5-1.0 volts p-p
Input DDC Signal	5 volts p-p (TTL)
Bandwidth	18Gbit/s
Video Format Supported	4K@60Hz, YUV4:4:4 8bit 4k@30Hz/1080P/1080i/720P/576P/480P/576i/480i
HDCP Compliant	HDCP2.2 and HDCP1.4
Output Video	HDMI2.0 and HDMI 1.4 (over HDBaseT and HDMI)
Audio Format Supported	PCM, Dolby5.1, DTS5.1 digital audio
Maximum Transmission Distance	1080P 100m, 4K 70m
Power Consumption	68 watts (Max.)
Dimensions	L438 x W394 x H44 mm
Mass (Main Unit)	3 KG

4. Panel Descriptions

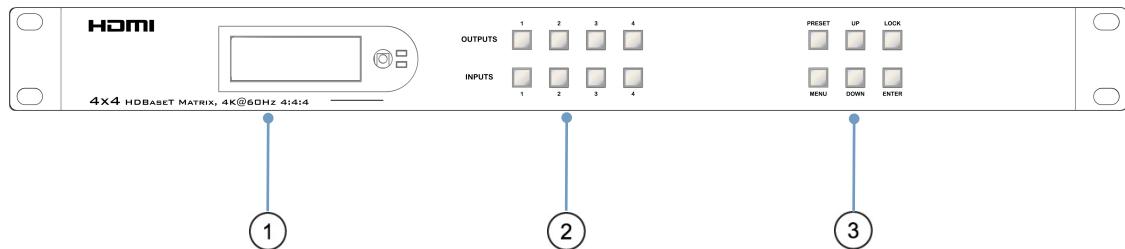


- ① LCD: Showing Matrix information
- ② Output button OUT1~8 & Input button IN1~8
- ③ Function button: MUTE; MENU; UP; DOWN; LOCK; ENTER

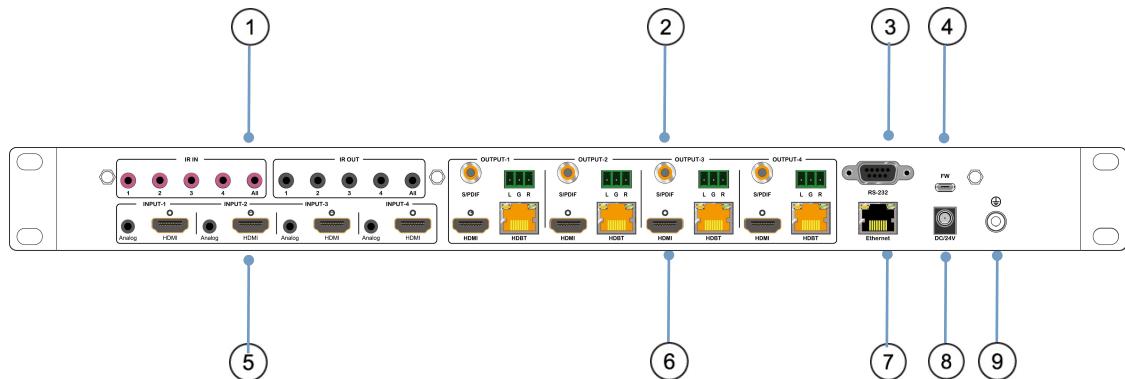

- ① IR input port x4 & All in & IR output port x4 & All out
- ② Audio out (Analog x4; SPDIF x4)
- ③ RS232 port
- ④ FW update port
- ⑤ HDMI Input x4 AUDIO IN (Analog x4)
- ⑥ HDBaseT out x4 & HDMI Loop out x4
- ⑦ Ethernet port
- ⑧ Power On/Off
- ⑨ Grounding

5. Wiring Diagram

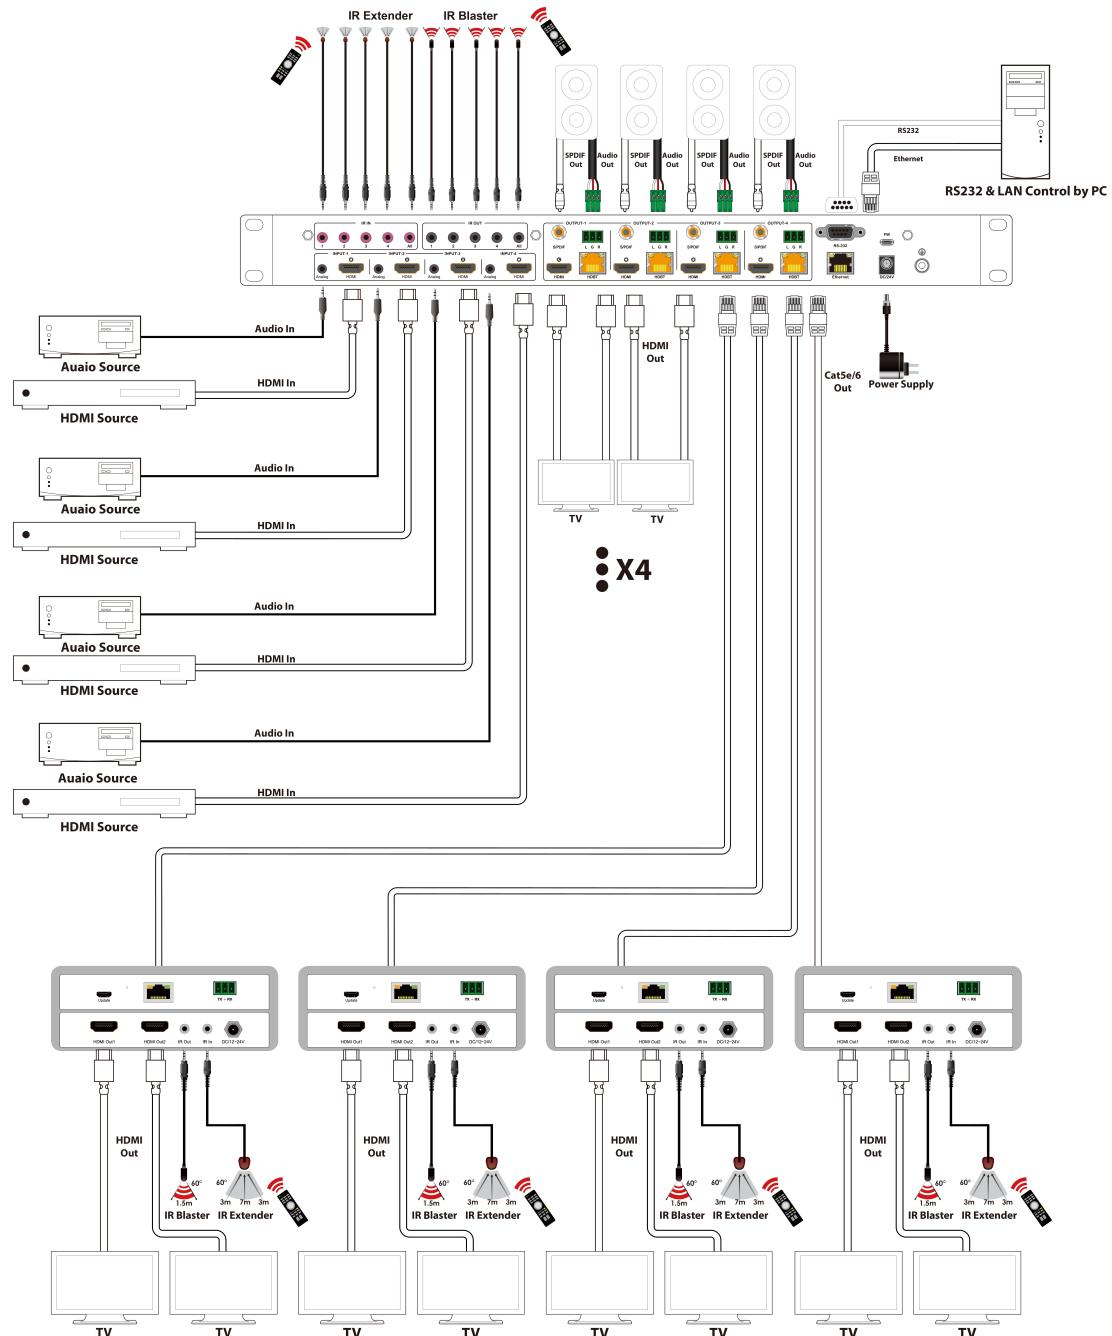

4X8 HDBaseT

Matrix 18gbps

Initializ ing . . .

6. Input / output channel key operation

Channel	Button method
Input 1-4	1. Directly press the number key, such as input channel 1, and select "1" to press (only when the output port is selected, the input channel number will be valid) 2. Long press means all outputs select current input
Output 1-4	Directly press the number key, such as the output channel 2, press button "2" and press it again to cancel the selection; Long press output 4 to select all channels, and long press again to cancel
MENU	Function Button; Enter the function option or back to previous option
ENTER	Confirm Button: enter function selection mode
UP	Button for UP option
DOWN	Button for NEXT option
PRESET	Preset, short press to quickly enter the preset call function
LOCK	Long press to LOCK, Long press again to UNLOCK

7. Video switching operation

7.1. Video switch

The signal switch includes 4 free switching channels, which can be configured as input/output according to the requirements, forming a matrix of $1 \times 4 \sim 4 \times 1$, which can switch any input.

Signal to 1 channel output or all channel output.

The specific operation as follows:

Output	1	2	3	4
Input	1	2	3	4

Switch the input to the output

Operation format: "output channel" + "input channel"

For Example: Output port 2 switch to input 1

Operation: Press OUT number "2" + IN number "1" to complete the switch

7.2. Video Control

The video interface have two sub menu

1. Video Routing

2. Video On/Off





The specific operation as follows:

1. Video Switch

Switch any output to one input or all outputs to the same input, default PTP.

① Select "Video" in the menu and press "ENTER"

- ②Then use "UP" " DOWN" button to select "Switching"
- ③Press "ENTER" enter next page
- ④Press "UP" " DOWN" button to select the output (The fifth port means ALL)
- ⑤Press "ENTER"
- ⑥Press "UP" " DOWN" to select the input
- ⑦Press "ENTER" , Switch Done

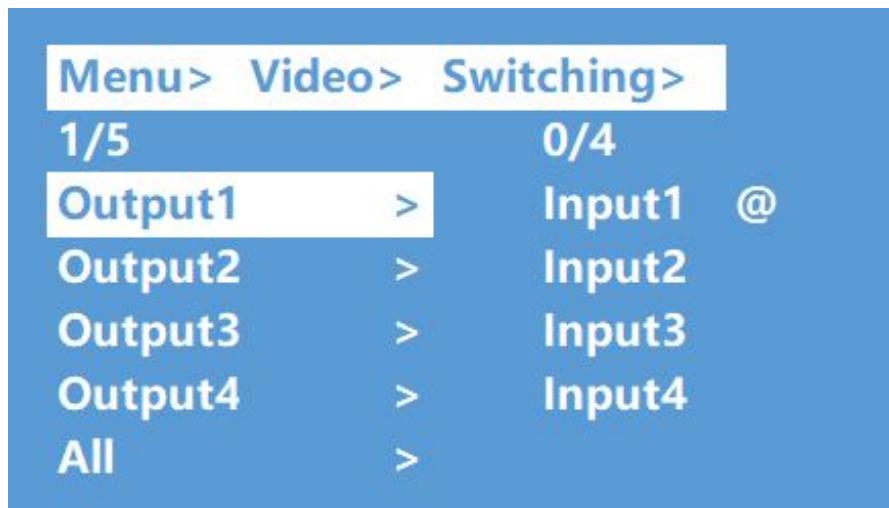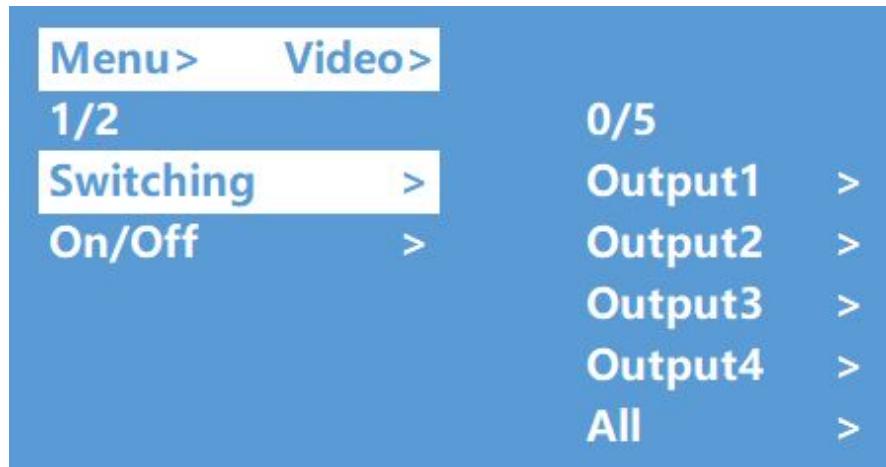

2. Video On/Off

Turn on/off any output video or all outputs video

- ①Select "Video" in the menu and press "ENTER"
- ②Then use "UP" " DOWN" button to select "On/Off"
- ③Press "ENTER" enter next page
- ④Press "UP" " DOWN" button to select the output (The 9th port means ALL)
- ⑤Press "ENTER" to select the HDMI 1~4; HDBT 1~4
- ⑥Press "UP" " DOWN" to select "On" or "Off"
- ⑦Press "ENTER" , Switch Done



7.3. Audio Control

The Audio Control have three sub menu

1. Line Out
2. Audio Embed
3. Audio De-Embed

The specific operation is as follows:

1. Line Out

HDMI output audio switch. You can select a channel of HDMI output to mute the sound of the TV


2. Audio Embed

Audio can be embedded to HDMI input. The embedded sound will cover the original sound of the signal source. You can select any input to embed

3. Audio De-Embed

You can set the output audio (analog audio and coaxial audio) at the same time. You can choose a certain audio output or mute



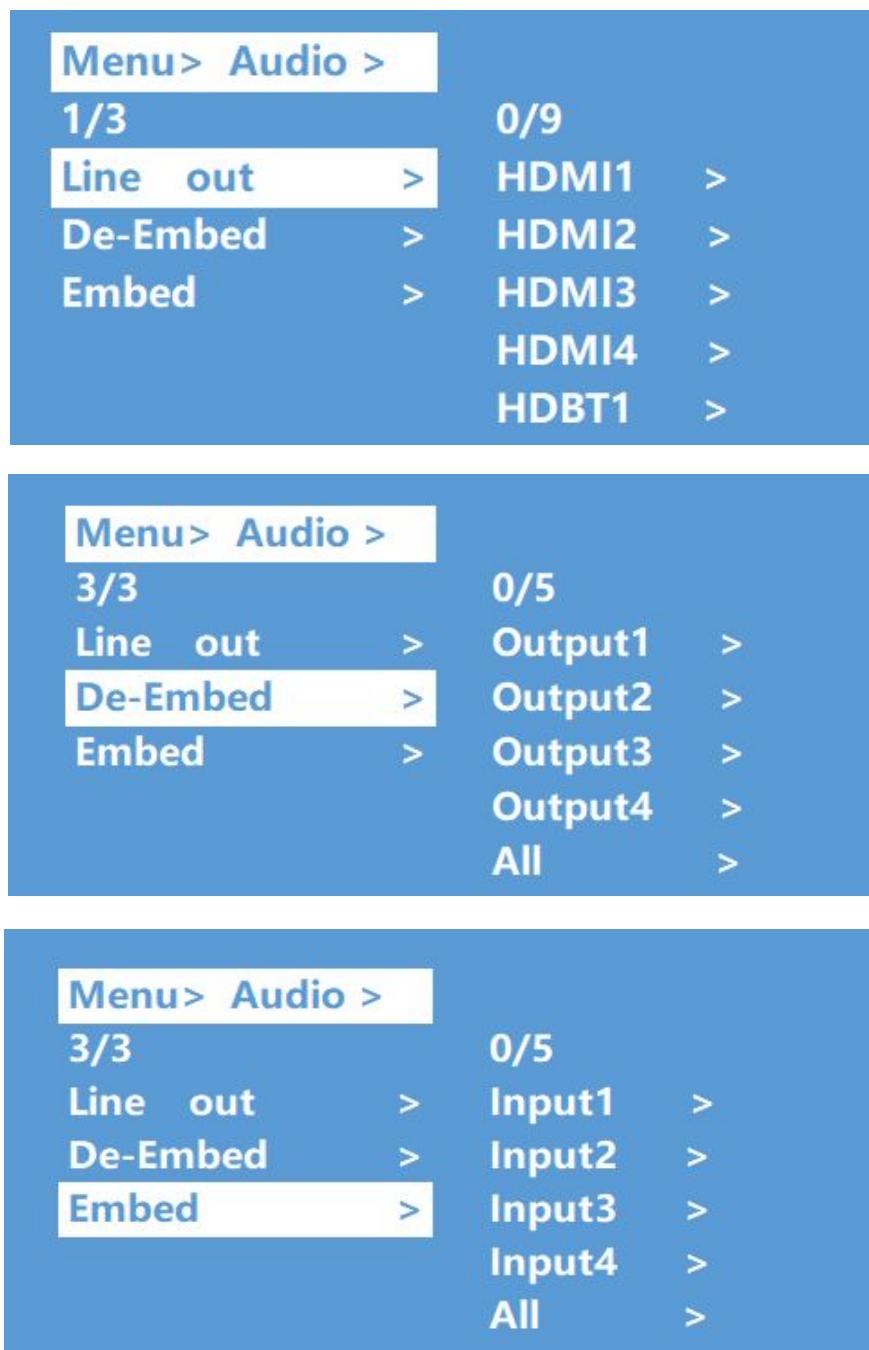

7.4. EDID Set Mode Interface

Default EDID


Default1	4K60 444-LPCM: 2.0 FXN1234	Default2	4K60 420-LPCM: 2.0 FXN1234
Default3	4K30 444-LPCM: 2.0 FXN1234	Default4	1080P60 444-LPCM: 2.0 FXN1234

EDID Mode can set each input's EDID, Include: Default EDID; User EDID; Copy EDID; Copy HDBT EDID.



7.5. Preset Interface

The PRESET interface can save the current video, audio, EDID, system Settings, etc., and supports 8 different scenes. Scenes can be modified and cleared through web pages, commands, and panels. The default preset is consistent with factory Settings

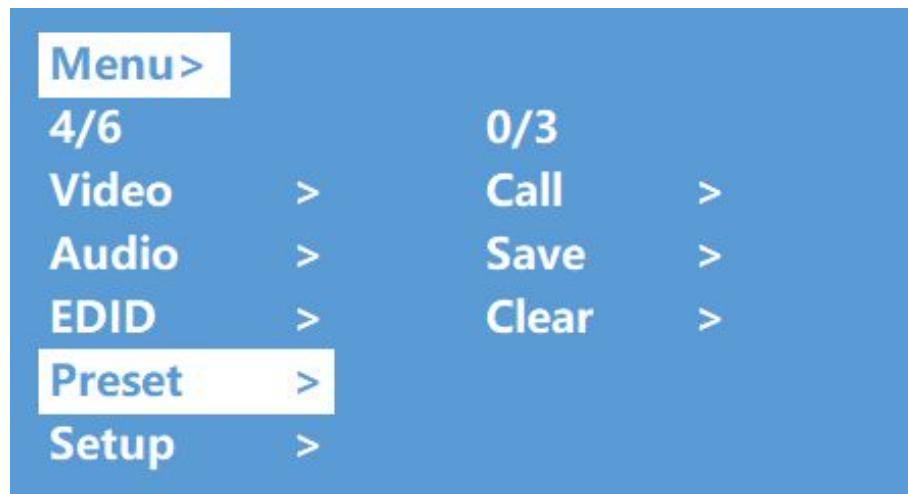

7.6. SETUP mode Interface

SETUP mode can set the device's RS-232 baud rate, POC Switch, DHCP, Reboot, Factory Specific operations are as follows




7.6.1. RS-232 Baud Rate setting

It has 4 kinds of baud rates inside the device: 9600; 19200; 57600; 115200

Default Baud Rate is: 115200

- ①Select "Setup" in the menu and press "ENTER"
- ②Then use "UP" " DOWN" button to select the "BAUD" and press "ENTER"
- ③Press "UP" " DOWN" button to select the baud rate and press "ENTER" to confirm

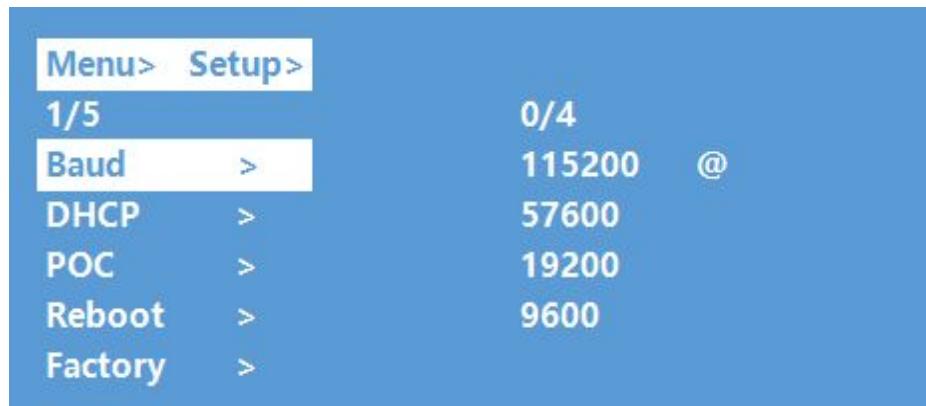

7.6.2. DHCP On/Off setting

On means Dynamic; Off means Static

- ①Select "Setup" in the menu and press "ENTER"
- ②Then use "UP" " DOWN" button to select the "DHCP" and press "ENTER"
- ③Press "UP" " DOWN" button to select "On" or "Off" and press "ENTER" to confirm



7.6.3. POC power switch

The POC interface can select a certain HDBT output switch to control POC power supply, and the default POC is "On"




7.6.4. Reboot setting




7.6.5. Factory setting

Factory Run: Reset Video, Audio, EDID, Setup setting, Preset, Device name.


Factory User: Reset Video, Audio, EDID, Setup setting.

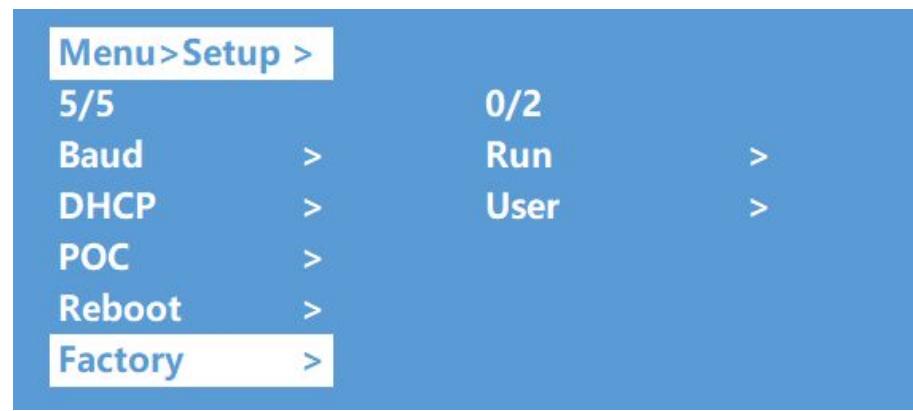


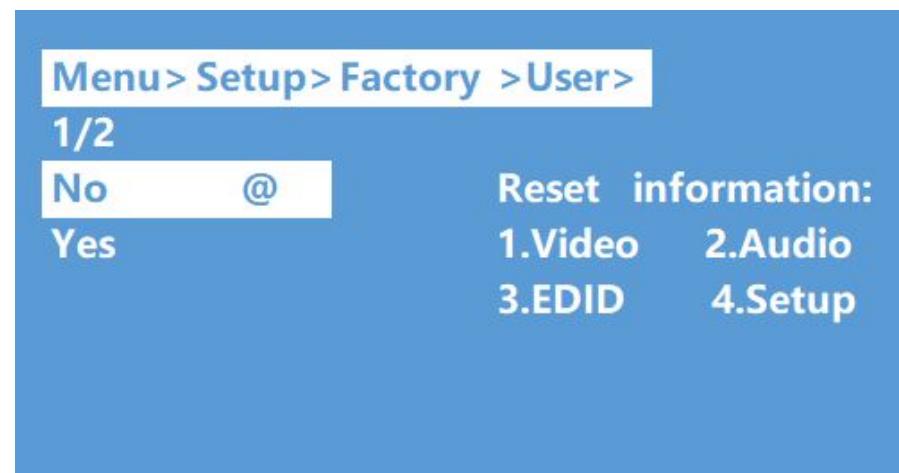


7.7. INFO mode Interface

Check the device information: IP or System information

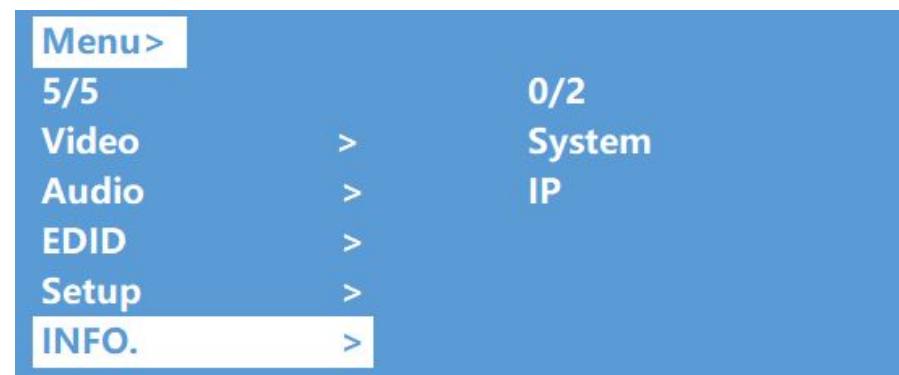

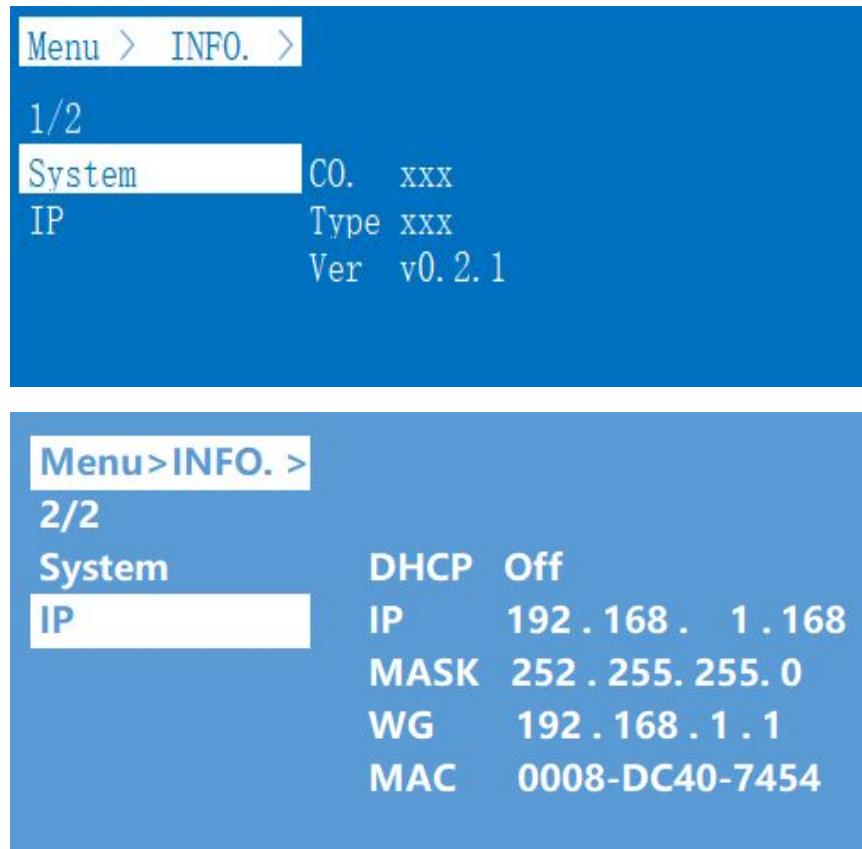

8. Audio Extraction

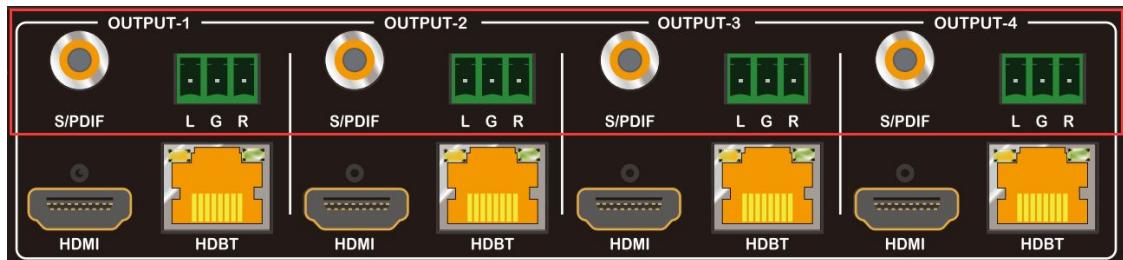


HDMI audio output supports uncompressed audio PCM, compressed audio Dolby and DTS, with a maximum support of 7.1 sound channels and a maximum sampling rate of 192KHz.

Analog audio supports PCM 2.0 channel.

S/PDIF audio supports Dolby or DTS, 5.1 channel.


9. Remote Control Description

- ① Standby Mode
- ② Lock or Unlock the Panel Button
- ③ Choose output from 1-4
- ④ Choose all the outputs.
- ⑤ X: Turn on/off output port which you select
- ⑥ PTP button: Mirror all inputs and outputs
(Ex. Input 1 to output 1, input 2 to output 2, etc)
- ⑦ Choose input from 1-4
- ⑧ Menu (back to previous option) button
- ⑨ UP and DOWN button
- ⑩ Enter button

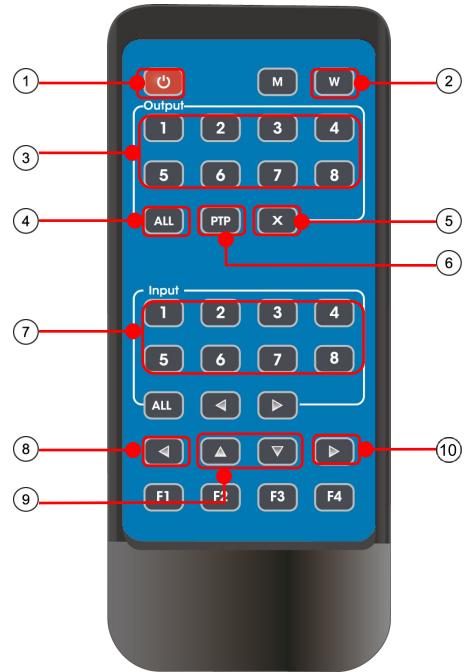


10. IR system

The matrix can pass the IR signal through the IR system to the HDMI source or pass the IR signal from the HDMI source to the HDMI sink

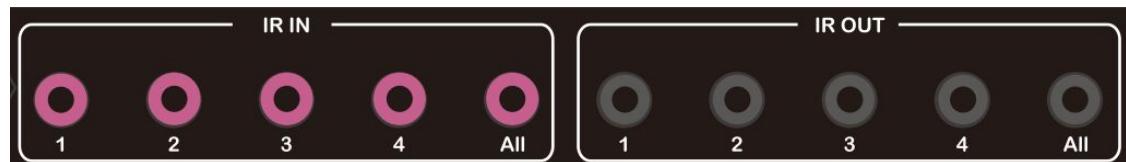

Dual way IR using:

- Step1: “IR IN” is for HDBaseT output, “IR OUT” is for input channel
- Step2: “IR IN ALL” Controlled by all input IR; “IR OUT ALL” Controlled by all output IR.
- Step3: HDBaseT receiver support connect with IR receiver to control the Matrix by remote
- Step4: Matrix IR channel “IR IN ALL” support connect with IR-RX cable to control the Matrix by remote

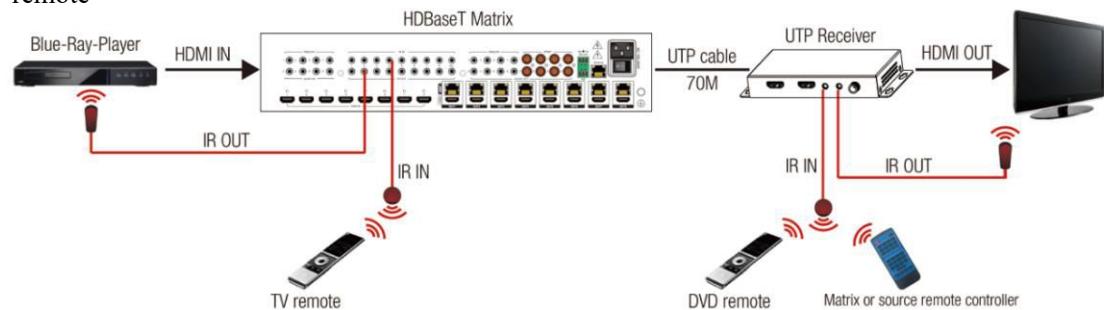

11. Command Control

Control software operation:


The serial control software is illustrated with SSCOM32 as an example.

Basic Settings:



Double-click the software in the installation package to run specifically (as shown in figure 1 below) and install the RS232 software on the computer.

Enter the main interface of the software, as shown in the figure below.

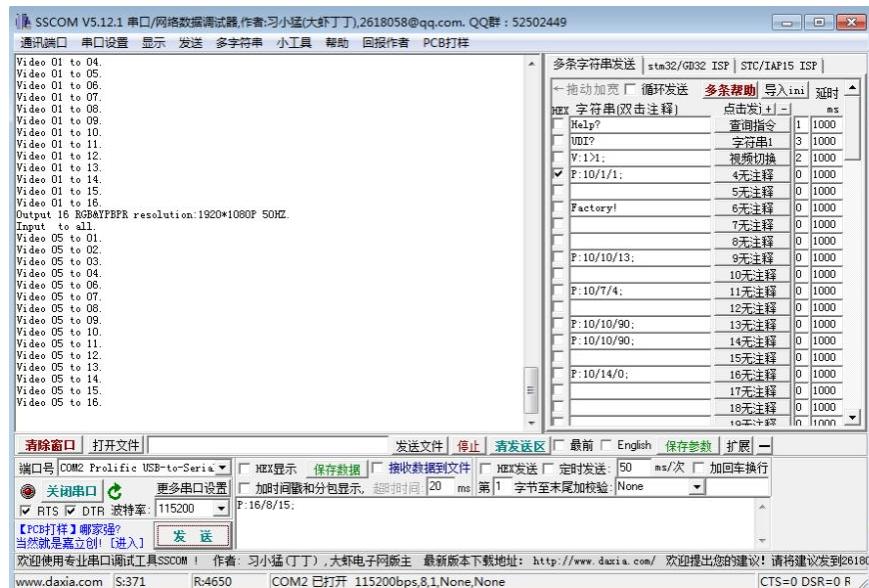

In the parameter configuration area, select the serial port number that the serial line connects to the PC

Baud rate: 115200 (default)

Data location: 8.

Stop bit: 1

Check bit: no

Then can input commands in the command input area to control the local or remote receiver

Instructions:

1. All commands start from "#", command head "%c": "d" parameters, "l" lock, "s" save.
2. The "_" in the commands cannot omit. Parameter: %d: 0 means ALL.
3. Command head & Parameter1 & Parameter2... need to add one "SPACE".

The following table is only an example. Please refer to the list of instructions.


Instruction description	instruction	parameter 1	parameter 2
Video switch	#video_d		
Audio Mode Switch	#audio_%c	in%d	enc=%d
EDID	#EDID_%c	In%d	cfg=%d

Please refer to the "Command list" for details.

Example: ALL output switches to input 4.

Operation format: #video_d out0 matrix=4

12. Web Control

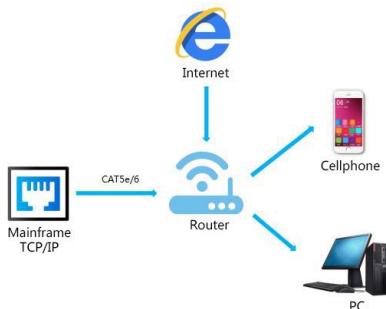

1). Connect the Ethernet port of matrix to the Ethernet port on PC by a crossover cable with RJ45 connectors.

2). Configure your PC as follows:

- ① Click **Start > Control Panel > Network and Sharing Center**.
- ② Click **Change Adapter Settings**.
- ③ Highlight the network adapter you want to use to connect to the device and click **Change settings of this connection**.

3). The local Area commotion properties window for Network selection appears as below:

4). Click the Highlight **Internet Protocol Version 4 (TCP/IPv4)**.

5). Click **Properties**.

6). Select **Use the following IP Address** for static IP addressing and fill in the details.

For TCP/IPv4 you can use any IP address in the range 192.168.1.1 to 192.168.1.255 (excluding 192.168.1.168).

7). Click **OK**.


8). Click **Close**.

Default IP Address: 192.168.1.168

MASK: 255.255.255.0

Gateway:192.168.1.1

MAC:0008-DCCA-CF3F

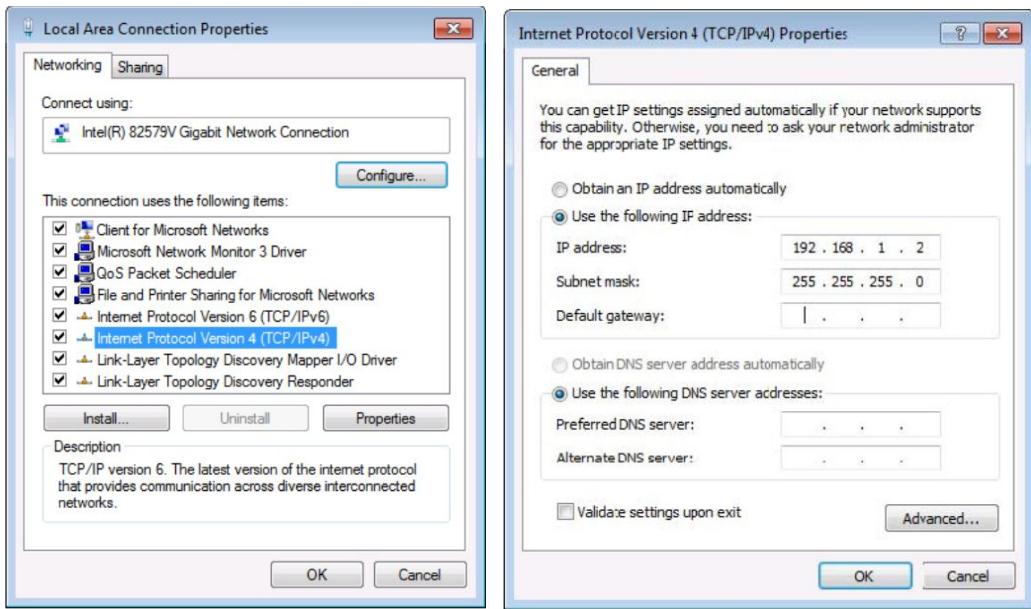

12.1. Enter Web and Control

Enter the default IP address of the matrix: 192.168.1.168

Account: admin

Password: admin

12.2. “Status” interface:

Input Info & Output Info & Device Info:

1. CONNECT: The input status display bar. After connecting with the device, it will check whether the current input terminal has access signal source.

When no signal source connected, it will be displayed as "×", and when there is a normal working signal source connected, it will be displayed as "√".

2. AUDIO-EMBED: The Audio Embed status display bar. After connecting with the device, it will check whether the current HDMI output terminal has Audio Embed.

When audio is not embedded, it will be displayed as "×". When audio is embedded, it will be displayed as "√".

3. Connect (Local) and (Remote): It will be displayed as "X" when there is no display device access, and "√" when there is display device access.

4. Audio De-Embed: Indicates if Audio separation is turned on. "X": means off. "√": means on

5. Audio HDMI & HDBT: Indicates if the current local (HDMI) / Remote (HDBT) Audio output is available. When the HDMI/HDBT Audio output is turned off, displayed as "×", and when the HDMI/HDBT Audio output is turned on, displayed as "√".

6. POC (Remote): “ON” “OFF” means POC turned on or off

7. HTML Version: Current WEB Version

Status		Input Info						
		In1	Connect	Audio-Embed				
Input		In2	✓	x				
Output		In3	✓	x				
Preset		In4	✓	x				
User EDID		Output Info						
		Out1	✓	✓	✓	✓	✓	OFF
Network		Out2	✓	✓	✓	✓	✓	OFF
System		Out3	✓	✓	✓	✓	✓	OFF
		Out4	✓	✓	✓	✓	✓	OFF
Device Info								
HTML Version:							V0.0.1	

12.3. “Input” interface:

Noted: Double Click the Rename column can change the name of the ports.

Status		Input						
		Input	Rename	Audio-Embed	Copy EDID From			
Input		In1	Input1	<input checked="" type="checkbox"/>	Default1:3840x2160P@60 444	<input type="button" value="▼"/>		
Output		In2	Input2	<input checked="" type="checkbox"/>	Default1:3840x2160P@60 444	<input type="button" value="▼"/>		
Preset		In3	Input3	<input checked="" type="checkbox"/>	Default1:3840x2160P@60 444	<input type="button" value="▼"/>		
User EDID		In4	Input4	<input checked="" type="checkbox"/>	Default1:3840x2160P@60 444	<input type="button" value="▼"/>		
Network		All		<input checked="" type="checkbox"/>	Default1:3840x2160P@60 444	<input type="button" value="▼"/>		
System								

12.4. “Output” interface:

Status		Output								
		Output	Rename	Video HDMI	Video HDBT	Audio De-Embed	Audio HDMI	Audio HDBT	Source	POC
Input		Out1	Output1	<input checked="" type="checkbox"/>	In1:CHANGHONG	<input checked="" type="checkbox"/>				
Output		Out2	Output2	<input checked="" type="checkbox"/>	In1:CHANGHONG	<input checked="" type="checkbox"/>				
Preset		Out3	Output3	<input checked="" type="checkbox"/>	In1:CHANGHONG	<input checked="" type="checkbox"/>				
User EDID		Out4	Output4	<input checked="" type="checkbox"/>	In1:CHANGHONG	<input checked="" type="checkbox"/>				
Network		All		<input checked="" type="checkbox"/>	In1:CHANGHONG	<input checked="" type="checkbox"/>				
System										

12.5. “Preset” interface:

Status	Preset	Rename	Save	Call
Input	Preset1	Preset1	Save	Call
Output	Preset2	Preset2	Save	Call
Preset	Preset3	Preset3	Save	Call
User EDID	Preset4	Preset4	Save	Call
Network	Preset5	Preset5	Save	Call
System	Preset6	Preset6	Save	Call
	Preset7	Preset7	Save	Call
	Preset8	Preset8	Save	Call

12.6. “User EDID” interface:

Status	User	Copy EDID From		
Input	User1	Select The EDID Information:	<input type="button" value="▼"/>	
Output	User2	Select The EDID Information:	<input type="button" value="▼"/>	
Preset	User3	Select The EDID Information:	<input type="button" value="▼"/>	
User EDID	User4	Select The EDID Information:	<input type="button" value="▼"/>	
Network				
System				

12.7. “Network” interface:

Status	Mac Address :	
Input	IP Address :	
Output	Net Mask Address :	
Preset	Gate Way Address :	
User EDID	DHCP :	<input type="button" value="Off"/>
Network	<input type="button" value="Apply"/>	
System		

12.8. “System” interface:

Status	Account management	
Input	User Name :	
Output	New Password :	
Preset	Confirm the Password :	
User EDID	<input type="button" value="Apply"/>	
Network		
System	Reboot :	<input type="button" value="Reboot"/>
	User Reset :	<input type="button" value="Factory User"/>
	Factory Reset :	<input type="button" value="Factory Run"/>

13. FW UPGRADE

First upgrade MCU (layer of application) and then upgrade CPLD, finally upgrade HTML (web page), (CPLD, HTML, MCU all support to use USB Micro port for upgrading)


A1 means MCU

C0 means CPLD

F0 means HTML


13.1. MCU Upgrade:

Open the software UART_ISP_V1.6.exe on PC, select the correct port and baud rate 115200, enter "A1" in Port, then select the path of the program in PATH (XXX. Bin), and click UPDATA to complete the upgrade

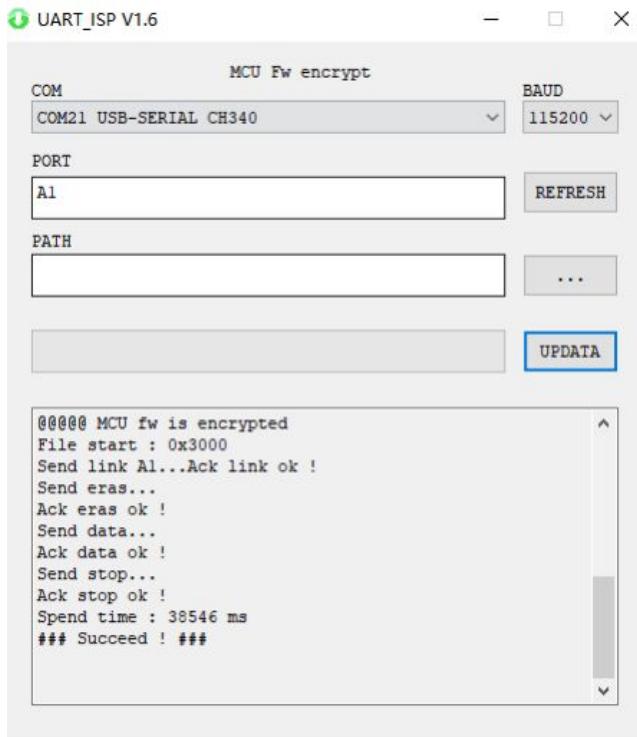


13.2. CPLD Upgrade:

Open the software UART_ISP_V1.6.exe on PC, select the correct port and baud rate 115200, enter "C0" in Port, then select the path of the program (XXX. VME) in PATH, and click UPDATA to complete the upgrade

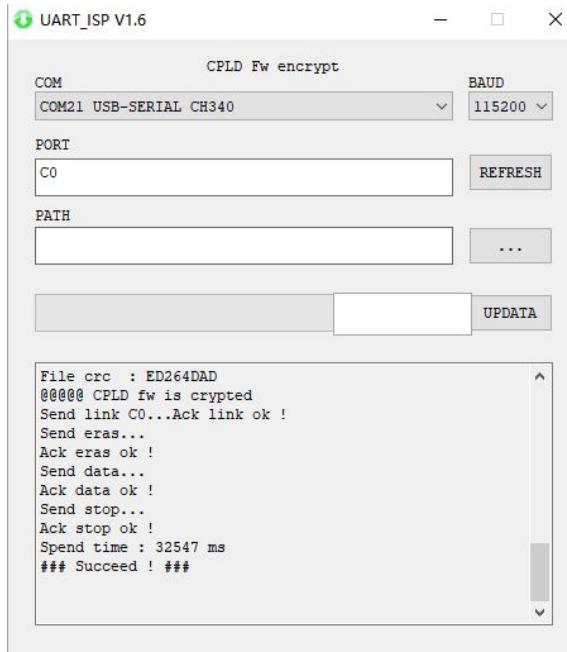

13.3. HTML (WEB GUI) Upgrade:

Open the software UART_ISP_V1.6.exe on PC, select the correct port and baud rate 115200, enter "F0" in Port, then select the path of the program (XXX. HTML) in PATH, and click UPDATA to complete the upgrade

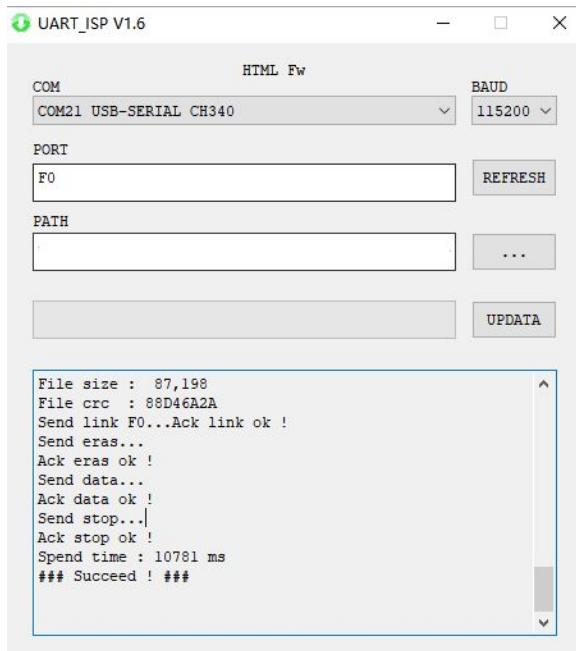

MAINTENANCE

Clean this unit with a soft, dry cloth. Never use alcohol, paint thinner or benzine to clean this unit.

PRODUCT SERVICE

(1) **Damage requiring service:**

The unit should be serviced by qualified service personnel if:

- (a) The DC power supply cord or AC adaptor has been damaged;
- (b) Objects or liquids have gotten into the unit;
- (c) The unit has been exposed to rain;
- (d) The unit does not operate normally or exhibits a marked change in performance;

The unit has been dropped or the cabinet damaged.

(2) **Servicing Personnel:** Do not attempt to service the unit beyond that described in these operating instructions. Refer all other servicing to authorized servicing personnel.

(3) **Replacement parts:** When parts need replacing ensure the servicer uses parts specified by the manufacturer or parts that have the same characteristics as the original parts. Unauthorized substitutes may result in fire, electric shock, or other Hazards.

(4) **Safety check:** After repairs or service, ask the servicer to perform safety checks to confirm that the unit is in proper working condition.

WARRANTY

If your product does not work properly because of a defect in materials or workmanship, our Company (referred to as "the warrantor") will, for the length of the period indicated as below, (**Parts(2)Year, Labor(90) Days**) which starts with the date of original purchase ("Limited Warranty period"), at its option either(a) repair your product with new or refurbished parts, or (b) replace it with a new or a refurbished product. The decision to repair or replace will be made by the warrantor.

During the "Labor" Limited Warranty period there will be no charge for labor.

During the "Parts" warranty period, there will be no charge for parts. You must mail-in your product during the warranty period. This Limited Warranty is extended only to the original purchaser and only covers product purchased as new. A purchase receipt or other proof of original purchase date is required for Limited Warranty service.